

We're here to help. If you have any questions or problems with setup or using the product please contact our Customer Service before returning the product.

email  
**info@phonedrs.com**

or call toll-free  
**1-844-368-7905**

**Monday-Friday 8:00am to 5:00pm ET**

We are a USA company based in Tennessee and pride ourselves with taking exceptional care of our customers.

**PHONEDRS.**  
DRY • RECHARGE • SANITIZE


1-844-368-7905 | PHONEDRS.com | info@phonedrs.com



PHDRS U10 QSG ENG 0321 Rev C

Model Number PDU1TEF

## QUICK START GUIDE

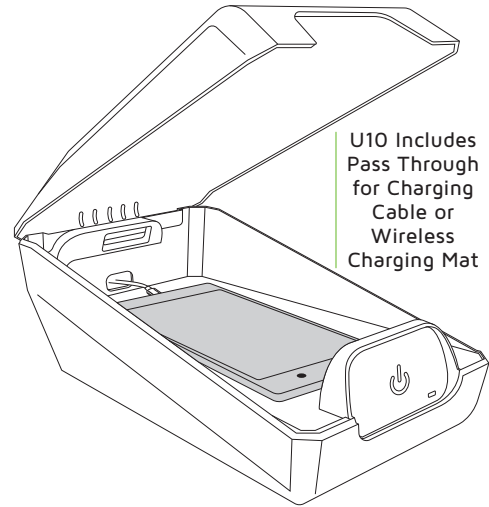

U10 Includes  
Pass Through  
for Charging  
Cable or  
Wireless  
Charging Mat

**PHONEDRS.**  
**U10**


DRY. RECHARGE. SANITIZE.

**PRODUCT SUPPORT**

1-844-368-7905


**WARRANTY INFORMATION**

[www.PHONEDRS.com/warranty/](http://www.PHONEDRS.com/warranty/)

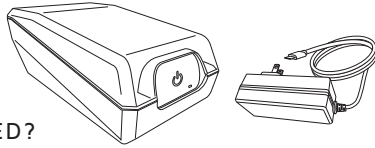


WHAT'S INCLUDED?


## QUICK START

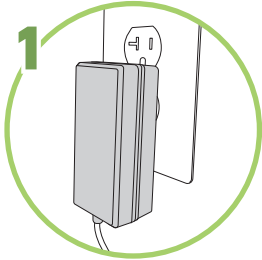


1 Plug the power plug into an electrical outlet.

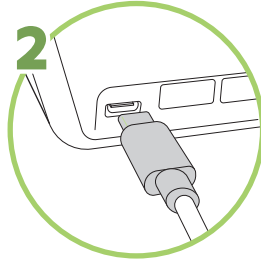


2 Plug the other end into the micro-USB port on **PHONEDRS.**

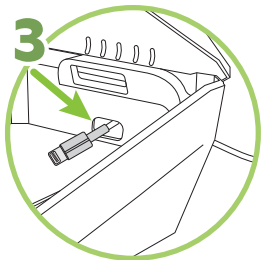


3 Thread your phone charging cable through the opening in the back of **PHONEDRS.**

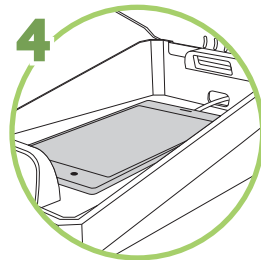

4 Place your phone on the tray.

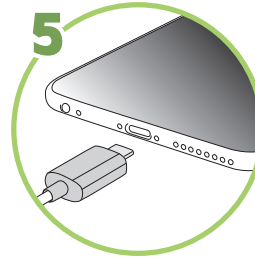


5 Plug the charging cable into your phone.

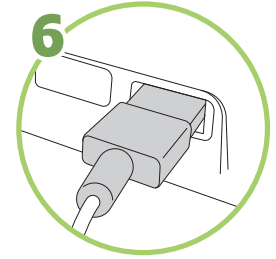

6 **PHONEDRS** has an additional USB port in back for charging other items (watch or other electronic devices).



OR

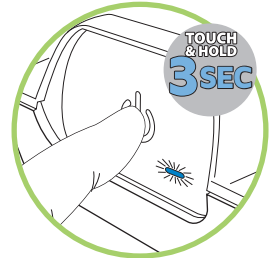

Close the lid and touch the power button.

Touch for 1 SECOND for sanitizing (5 min.) and drying (6 hrs.).

Touch and Hold for 3 SECONDS for sanitizing (5 min.) only.

**PHONEDRS** will shut off automatically at the end of the cycle.

Interrupt the cycle at any time by lifting the lid.

The cycle will not restart once the lid is closed.

Touch the power button for one second to restart the cycle.

Remember to register your **PHONEDRS**  
[www.PHONEDRS.com/warranty](http://www.PHONEDRS.com/warranty)

Need assistance?

1-844-368-7905 | [info@phonedrs.com](mailto:info@phonedrs.com)

The sanitizing cycle reduces 99.9% of bacteria, specifically Staphylococcus Aureus.